

Installation Guide

Replacement Handle for Andersen®

LuminAire™ Retractable Insect Screen Door


For installation help please visit www.AndersenLuminAire.com/install



Please Do Not Return Product to Store!

PLEASE call the Storm Door Solution Center at 844-813-6664, with any questions regarding installation, lost part replacement, or anything else related to your retractable insect screen purchase. Replacement parts can also be found at: parts.andersenstormdoors.com


Read this entire guide before you begin your installation. If your abilities do not match the requirements of this installation, contact an experienced contractor.

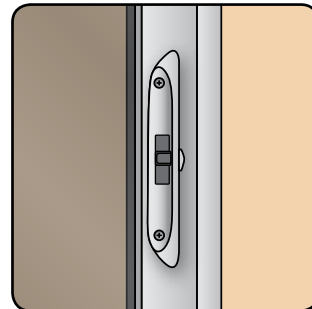

PARTS OVERVIEW

Your replacement part should contain the following parts.

- 1 Interior Handle
- 2 Exterior Handle
- 3 Latch Plate
- 4 Handle Screws

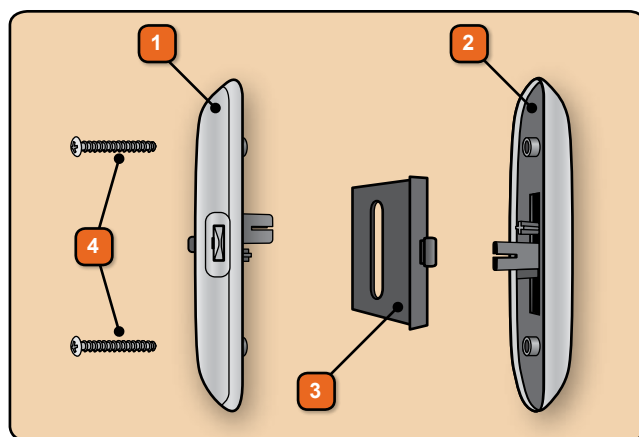

SAFETY FIRST: Please read and follow all Cautions and Warnings in this guide.

RECOMMENDED TOOLS



Safety Glasses



Screwdrivers

WARNING

Follow manufacturers' instructions for hand and power tools. Always wear safety glasses. Failure to do so could result in injury, product or property damage.

CAUTION

Metal components of the retractable insect screen may become hot when exposed to sunlight.

IMPORTANT

The retractable insect screen is intended for reasonable insect control and not the retention of objects, persons, or pets within the interior. The retractable insect screen will not stop a person from falling through the door.



This is the Safety Alert Symbol used to alert you to potential injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

Signal Word and Consequence

COULD

Result in:

WARNING

Major Injury / Death

COULD

Result in:

CAUTION

Minor Injury

COULD

Result in:

NOTICE



Product or Property Damage

IMPORTANT

Procedure and Product Information

HANDLE REMOVAL & REINSTALLATION



Tools Recommended:

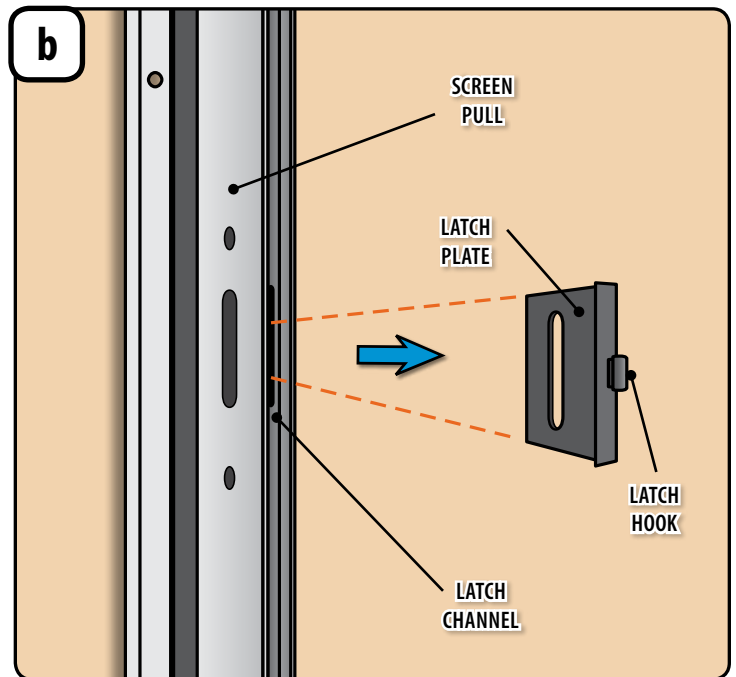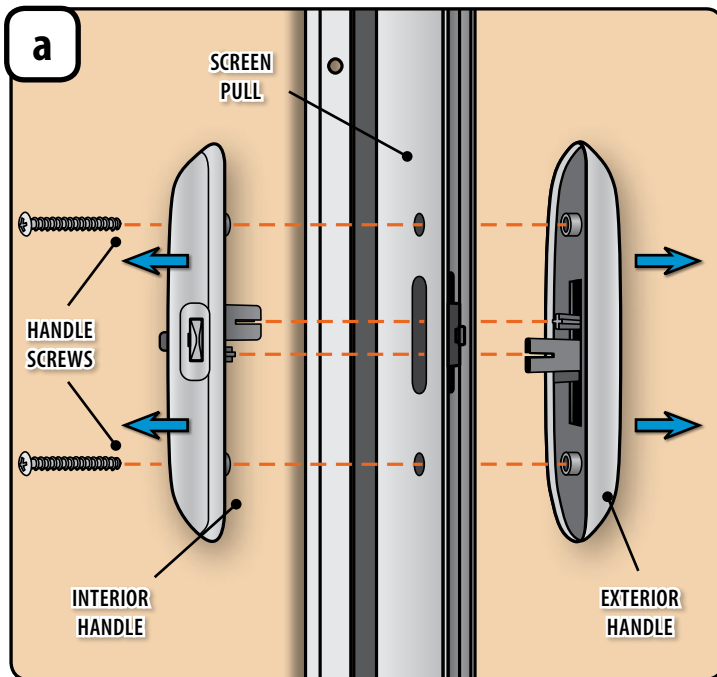

a From the interior side of the **Screen Housing**, remove the two **Handle Screws** with a Phillips screwdriver. Carefully pulling the handles from the **Screen Pull**.

b1 Remove the **Latch Plate** from the **Latch Channel** on the **Screen Pull**.

b2 Dispose of **Latch Plate**, **Handles** and **Handle Screws** properly.

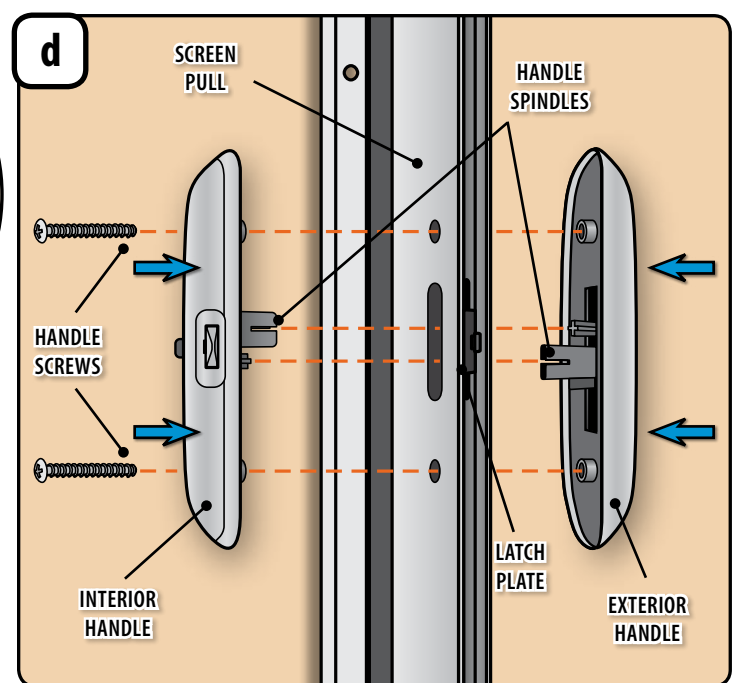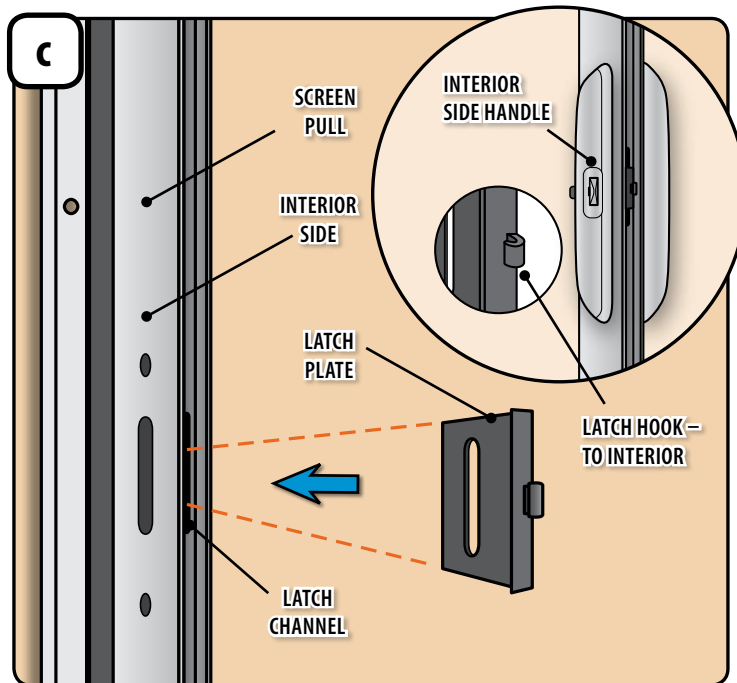

c With the replacement **Latch Plate** in the proper orientation, place it into the center of the **Latch Channel** on the **Screen Pull**.

d1 Place the **Exterior Handle** on the exterior side of **Screen Pull**, carefully sliding the **Handle Spindles** through the **Latch Plate**.

d2 Place the **Interior Handle** onto the interior side of the **Screen Pull**, aligning the **Handle Spindles** as you slide them together.

d3 Install the two **Handle Screws** in the **Interior Handle**.