

# Replacement Guide

## for Sweep on Andersen® and EMCO® Storm Doors



### Please Do Not Return Product to Store!


**PLEASE** call the storm door Solution Center at 1-800-933-3626, with any questions regarding installation, lost part replacement, or anything else related to your storm door purchase.

**Read this entire guide before you begin your installation. If your abilities do not match the requirements of this installation, contact an experienced contractor.**

### PARTS OVERVIEW

Your installation kit should contain the following parts. However, in some door models, not all of the parts will be used.

- A** Vinyl OR Metal Sweep
- B** Sweep Fin (If applicable, quantity varies)
- C** Color-Matched #8 x 1/2" Screws (Quantity varies)

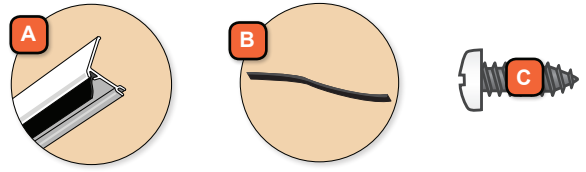

Sweep style may vary from image shown.

### SAFETY FIRST: Please read and follow all cautions and warnings in this guide.

#### CAUTION


Do not drill completely through door. This will create an unnecessary hole in the door and may cause water and air infiltration.




#### WARNING

Improper use of hand or power tools could result in injury and/or product damage. Follow equipment manufacturer's instructions for safe operation. Always wear safety glasses.

### RECOMMENDED TOOLS

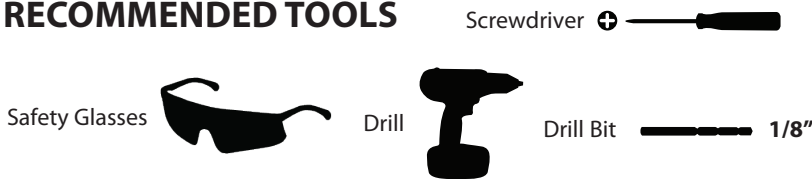

#### For Sweep Fins:

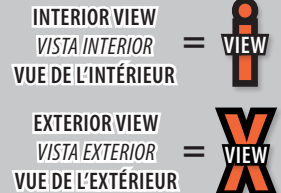

Andersen Storm Door Division is a wholly owned subsidiary of Andersen Corporation. Andersen Storm Door Division manufactures and supports the limited warranties for Andersen® and EMCO® storm doors. "Andersen" and "EMCO" and all other marks where denoted are trademarks of Andersen Corporation. ©2014 Andersen Corporation. All rights reserved.

Andersen SDD, PO Box 853  
Des Moines, IA 50306-0853  
Rev 1-2014 12043 Print in B&W



**p/n 504300**

**1 REMOVE EXISTING SWEEP**



Tools needed:




**2 INSTALL SWEEP FIN(S)**  
(If applicable)

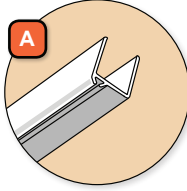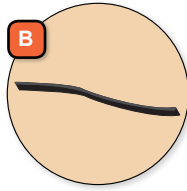Tools needed:



1. Remove all screws fastening the sweep to the door frame.
2. Open the door and slide the sweep off the door frame.
3. Properly discard sweep and screws.

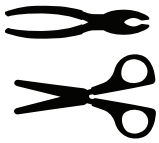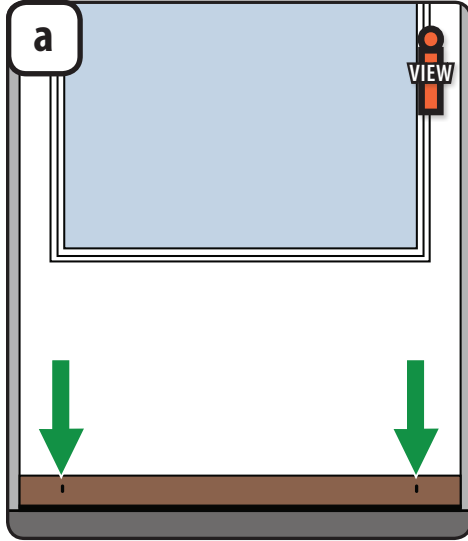


**IF APPLICABLE, install bottom sweep fin(s).**

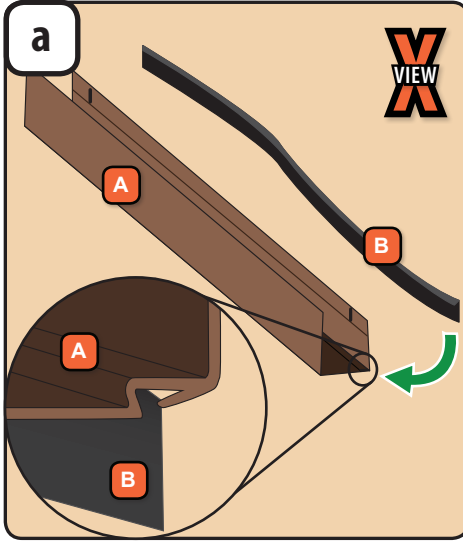1. Slide the sweep fin (B) into the fin track flush with the sweep end (A).
2. Use pliers to crimp the ends of the track legs (both ends) to secure the fin.
3. Trim off excess sweep fin material.
4. For door sweeps with two sweep fins, repeat above process with second fin.


**3 INSTALL SWEEP**

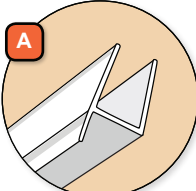
Tools needed:



1/8"

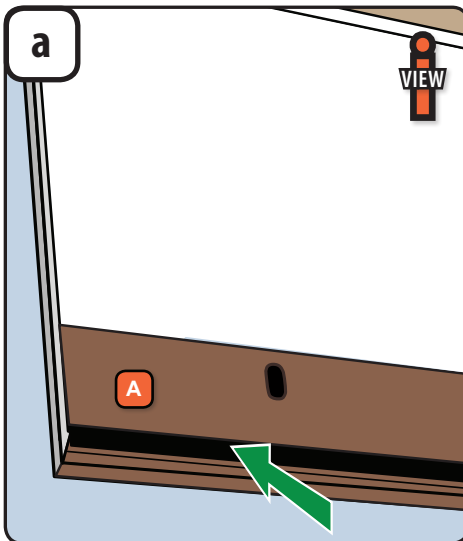

1. Open the door and slide the sweep (A) onto the bottom of the door frame. Make sure that the screw slots on the sweep are towards the interior.
2. Position the door sweep so that it is flush with the latch-side of the door frame.

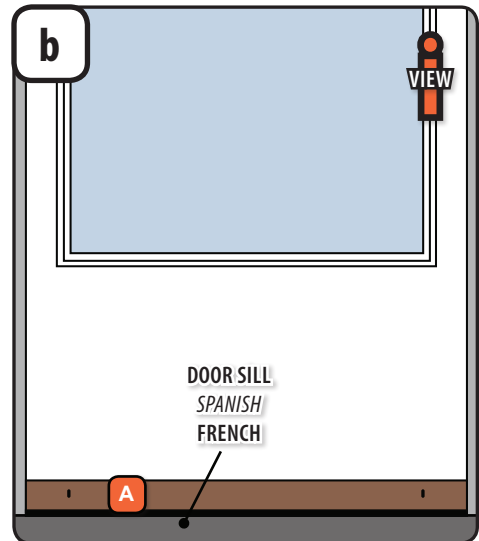

1. Close the door. From the interior, adjust the sweep up or down until the sweep fin lightly comes into contact with the door sill.
2. If necessary, use the drill and 1/8" drill bit to drill a starter hole into the door using the pre-drilled hole slots as guides.
3. Fasten the sweep to the door using the 1/2" screws provided (C).