

Latch Rail Installation Guide



Please Do Not Return Product to Store!

PLEASE call the storm door Solution Center at 1-800-933-3626

with any questions regarding installation, lost part replacement, or anything else related to your storm door purchase.

- If your abilities do not match the requirements of this installation, contact an experienced contractor.
- Andersen has no responsibility in regard to the post-manufactured assembly and installation of Andersen products.

PARTS OVERVIEW

- 1 Latch Rail
- 2 Screw Cover
- 3 Screw Pack
- 4 Spacer Clip

RECOMMENDED TOOLS




WARNING / ADVERTENCIA / AVERTISSEMENT :

- Follow manufacturers' instructions for hand or power tools. Always wear safety glasses. Failure to do so may result in injury and/or product damage.
- Siga las instrucciones del fabricante para herramientas manuales o eléctricas. Siempre use antiparras de seguridad. No hacerlo puede provocar lesiones en las personas y/o daños en el producto.
- Suivez les directives d'utilisation du fabricant pour les outils manuels ou électriques et portez toujours des lunettes de sécurité, sans quoi vous risquez de vous blesser ou d'endommager le produit.

1. REMOVE LATCH RAIL

Tools needed:

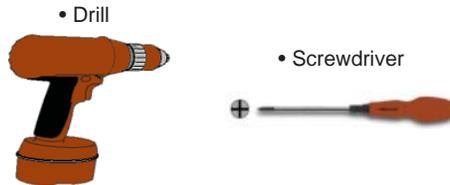

LEFT HANDED - EXTERIOR VIEWS



Figure 1

In this step, you will remove the old latch rail from the mounting surface.

1. Remove one #6 x 1/2" screw from rain cap. Do not discard this screw, it is used in step 2. (Figure 1)

RIGHT HANDED - EXTERIOR VIEWS



Figure 1

1. REMOVE LATCH RAIL (CONTINUED)

LEFT HANDED - EXTERIOR VIEWS

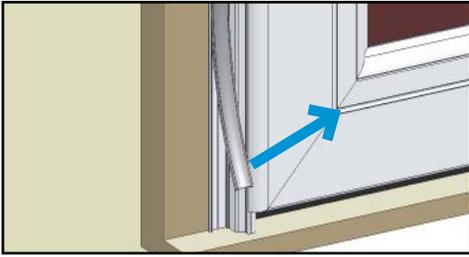


Figure 2

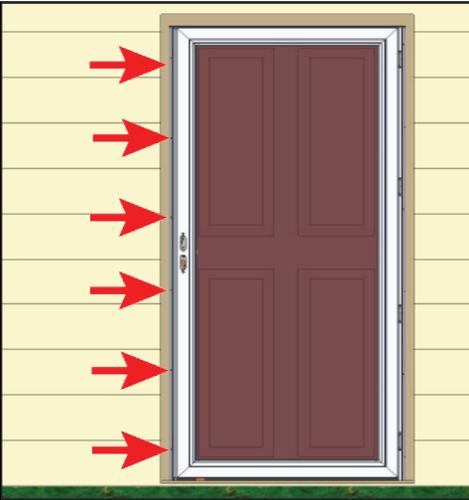


Figure 3

- Remove screw cover by prying up the edge with a screw driver, and peeling the screw cover out of the track. (Figure 2)

- Remove six #8 x 1" screws from latch rail (Figure 3)
- Remove latch rail

RIGHT HANDED - EXTERIOR VIEWS



Figure 2

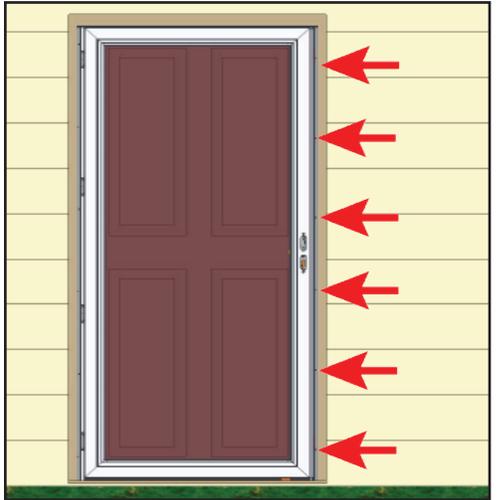


Figure 3

2. INSTALL LATCH RAIL

Tools needed:



• Drill



• Screwdriver

LEFT HANDED - EXTERIOR VIEWS

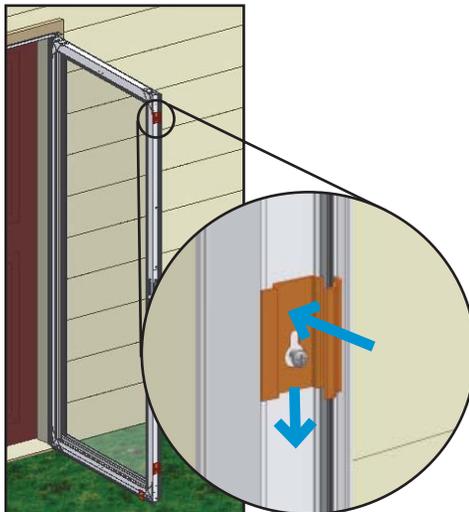


Figure 4

In this step, install the new latch rail onto the mounting surface.

TIP: Use a screw driver to loosen and tighten screws in Steps 5 and 6; a drill may strip the screw holes.

- Loosen top and bottom edge seal screws, but do not remove
- Position clip over screw head and push down so screw head is seated in small end of keyway.
- Tighten screw, and repeat for bottom clip

RIGHT HANDED - EXTERIOR VIEWS

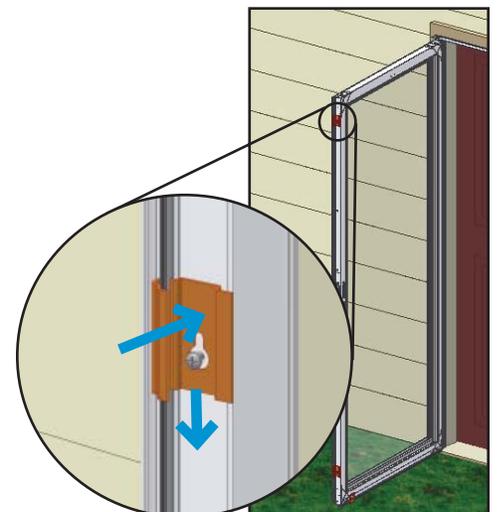


Figure 4

2. INSTALL LATCH RAIL (CONTINUED)

LEFT HANDED - EXTERIOR VIEWS



Figure 5

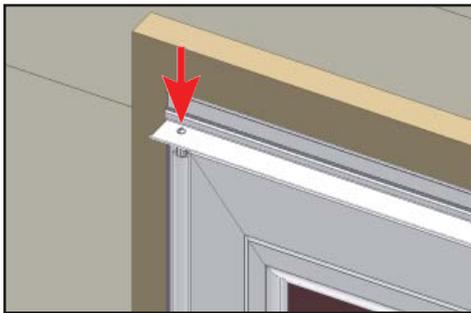


Figure 6



Figure 7

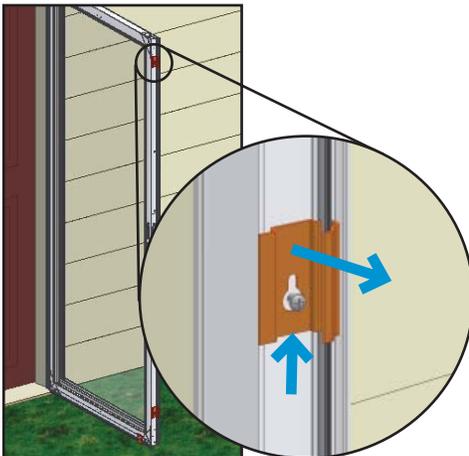


Figure 8

4. Place the latch rail in the opening and close the door. Push the latch rail towards the door frame until it fits tightly inside the clips installed in step 2-1.

5. Reinstall #6 x 1/2" screw into screw track in latch rail (Figure 6)

6. Fasten the door to the mounting surface using six #8 x 1 screws (Figure 7)

TIP: Use a screw driver to loosen and tighten screws in Steps 5 and 6; a drill may strip the screw holes.

7. Remove spacer clips by loosening screws, and then slide clip up and pull away from door to remove clip. (Figure 8)
8. Re-tighten screws.

RIGHT HANDED - EXTERIOR VIEWS



Figure 5

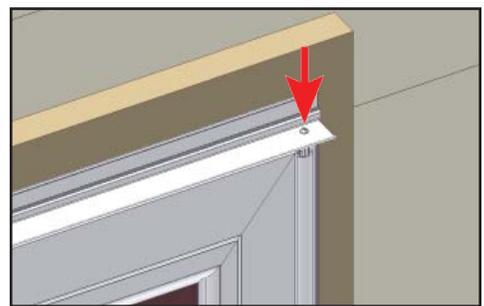


Figure 6



Figure 7

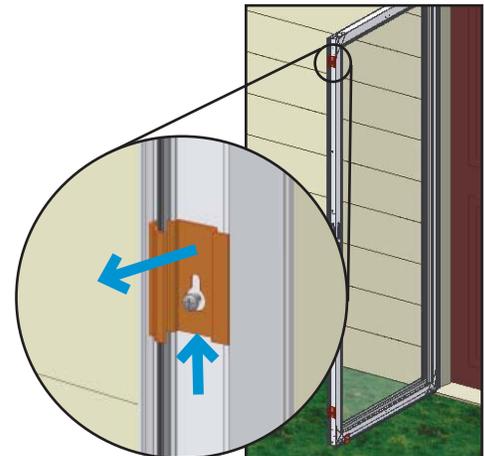


Figure 8

3. INSTALL LATCH RAIL SCREW COVER

LEFT HANDED - EXTERIOR VIEWS

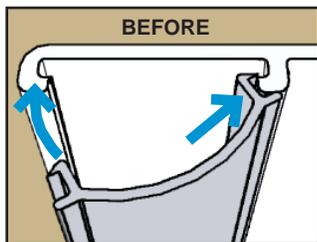


Figure 9

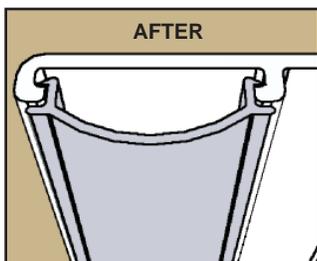


Figure 10

In this step, you will install the screw cover

1. Insert a groove in the screw cover into the inside track of the latch rail. (Figure 9)
2. Snap the groove in the outside of the screw cover into the outside track of the latch rail. (Figure 10).
3. Move along entire length of screw cover, pressing every few inches to snap into track..

RIGHT HANDED - EXTERIOR VIEWS

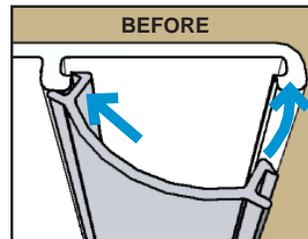


Figure 9

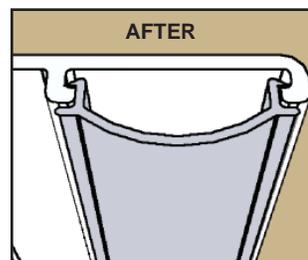


Figure 10